


Universal Electronics

Titan 2056-ISX Remote Control

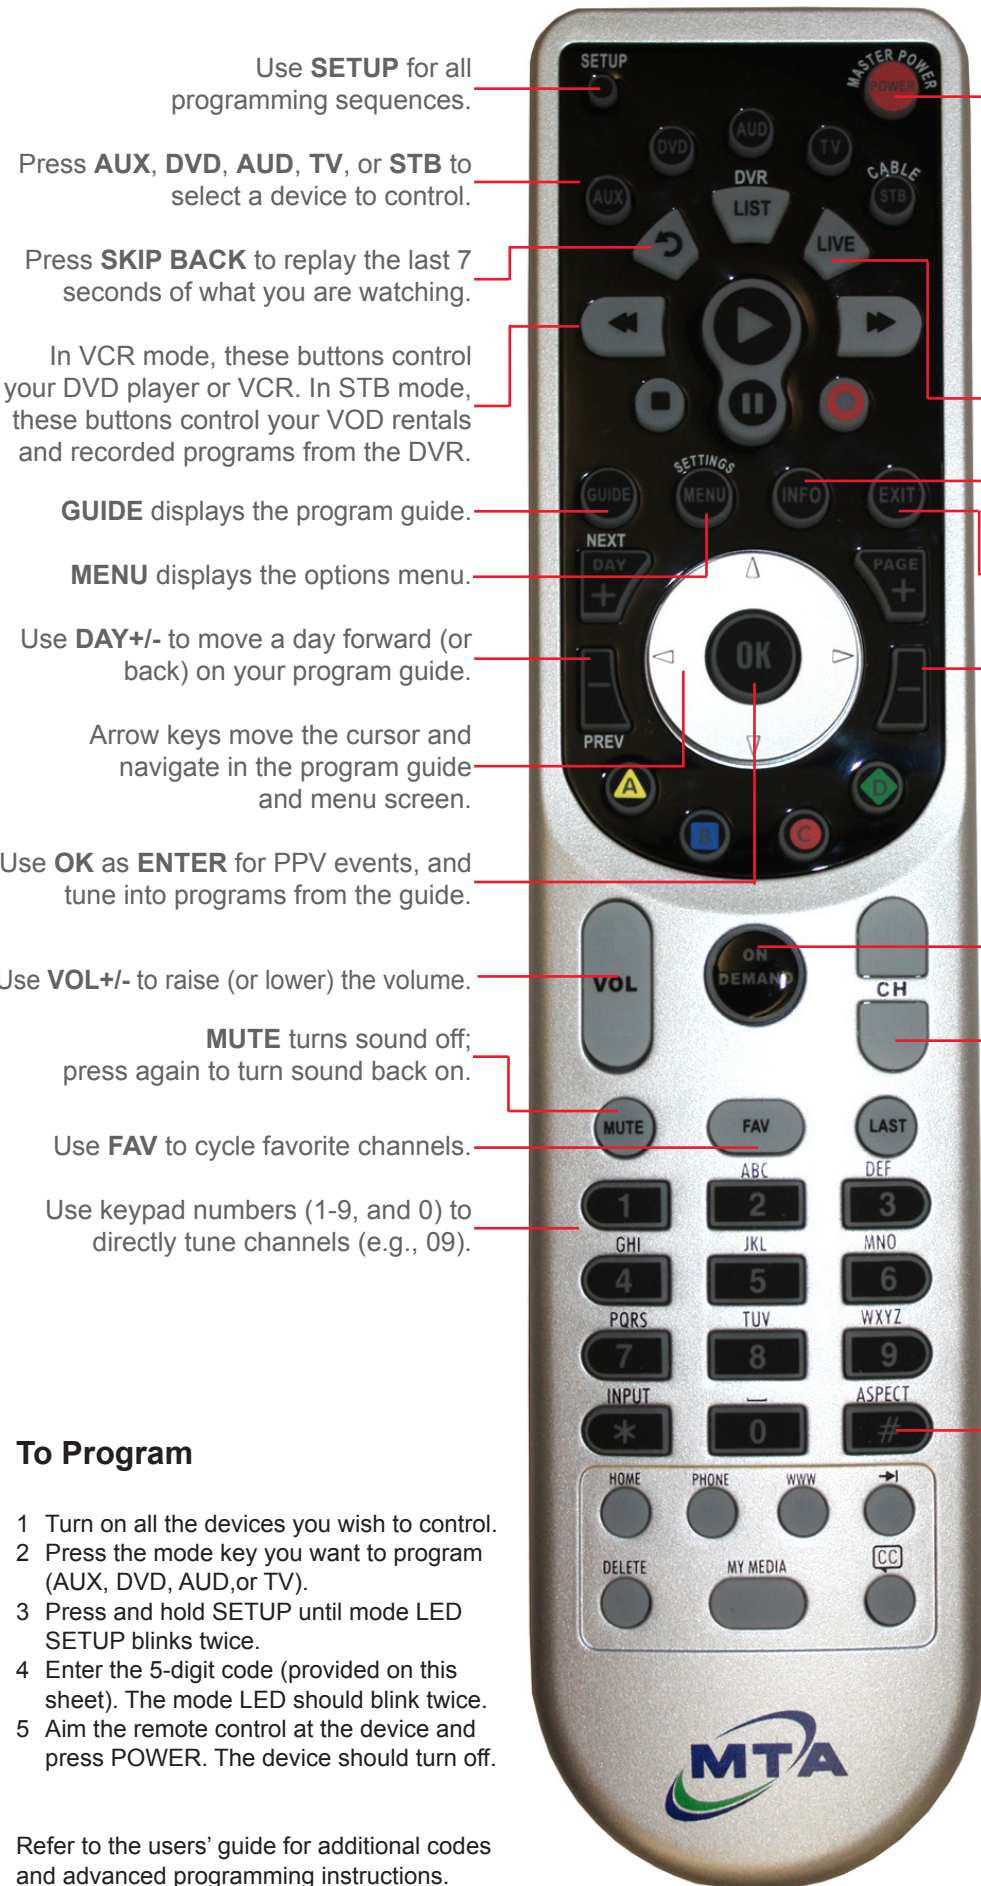

Use **SETUP** for all programming sequences.

Press **AUX**, **DVD**, **AUD**, **TV**, or **STB** to select a device to control.

Press **SKIP BACK** to replay the last 7 seconds of what you are watching.

In VCR mode, these buttons control your DVD player or VCR. In STB mode, these buttons control your VOD rentals and recorded programs from the DVR.

GUIDE displays the program guide.

MENU displays the options menu.

Use **DAY+/-** to move a day forward (or back) on your program guide.

Arrow keys move the cursor and navigate in the program guide and menu screen.

Use **OK** as **ENTER** for PPV events, and tune into programs from the guide.

Use **VOL+/-** to raise (or lower) the volume.

MUTE turns sound off; press again to turn sound back on.

Use **FAV** to cycle favorite channels.

Use keypad numbers (1-9, and 0) to directly tune channels (e.g., 09).

To Program

- 1 Turn on all the devices you wish to control.
- 2 Press the mode key you want to program (AUX, DVD, AUD, or TV).
- 3 Press and hold **SETUP** until mode LED SETUP blinks twice.
- 4 Enter the 5-digit code (provided on this sheet). The mode LED should blink twice.
- 5 Aim the remote control at the device and press **POWER**. The device should turn off.

Refer to the users' guide for additional codes and advanced programming instructions.

Press **POWER** once to turn on or off selected device.

Press **LIVE** to return to live TV.

INFO displays the current channel and program information.

EXIT directly exits menus, guides and applications.

PAGE+/- pages up (or down) menu screens and program guide.

Press **ON DEMAND** for access to programming and services menu.

CH+/- selects the next higher (or lower) channel.

Press **ASPECT** to change the aspect ratio (4:3 or 16:9) on your STB or TV.

To Troubleshoot

- 1 Press Cable/STBL button
- 2 Power cycle the set top box
- 3 Make sure there are no obstructions between the remote and set top box
- 4 Replace the remote's batteries
- 5 Replace the remote

Code for TV 1:

--	--	--	--	--

Code for TV 2:

--	--	--	--	--

Code for TV 3:

--	--	--	--	--